

SNC-M300

ENG

RUS

POL

# SNC-M300

## user manual



imagine the possibilities

Thank you for purchasing this Samsung product. To receive more complete service, please register your product at [www.samsung.com/global/register](http://www.samsung.com/global/register)

**SAMSUNG**

# safety precautions

---

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK. DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL		



This symbol indicates that dangerous voltage consisting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

## WARNING

---

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- The camera is to be only connected to PoE networks without routing to the outside plant.

## WARNING

---

1. Be sure to use only the standard adapter that is specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product.
2. Incorrectly connecting the power supply or replacing battery may cause explosion, fire, electric shock, or damage to the product.
3. Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause abnormal heat generation or fire.
4. Securely plug the power cord into the power receptacle. Insecure connection may cause fire.
5. When installing the camera, fasten it securely and firmly. A falling camera may cause personal injury.
6. Do not place conductive objects (e.g. screwdrivers, coins, metal things, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects.
7. Do not install the unit in humid, dusty, or sooty locations. Doing so may cause fire or electric shock.

8. If any unusual smells or smoke come from the unit, stop using the product. In such case, immediately disconnect the power source and contact the service center. Continued use in such a condition may cause fire or electric shock.
9. If this product fails to operate normally, contact the nearest service center. Never disassemble or modify this product in any way. (SAMSUNG is not liable for problems caused by unauthorized modifications or attempted repair.)
10. When cleaning, do not spray water directly onto parts of the product. Doing so may cause fire or electric shock.

## CAUTION

---

1. Do not drop objects on the product or apply strong shock to it. Keep away from a location subject to excessive vibration or magnetic interference.
2. Do not install in a location subject to high temperature (over 122°F), low temperature (below 14°F), or high humidity. Doing so may cause fire or electric shock.
3. If you want to relocate the already installed product, be sure to turn off the power and then move or reinstall it.
4. Remove the power plug from the outlet when there is a lightning. Neglecting to do so may cause fire or damage to the product.
5. Keep out of direct sunlight and heat radiation sources. It may cause fire.
6. Install it in a place with good ventilation.
7. Avoid aiming the camera directly towards extremely bright objects such as sun, as this may damage the CCD image sensor.
8. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
9. The Mains plug is used as a disconnect device and shall stay readily operable at any time.

# important safety instructions

---

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.  
Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug.  
A polarized plug has two blades with one wider than the other.  
A grounding type plug has two blades and a third grounding prong.  
The wide blade or the third prong is provided for your safety.  
If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
13. Unplug this apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
14. Refer all servicing to qualified service personnel.  
Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or been dropped.



Preparation	<b>03</b>	Features
	<b>03</b>	Precautions – Installation and Use
	<b>04</b>	Recommended PC Specifications
	<b>04</b>	Compatible IP Routers
	<b>04</b>	Compatible PoE Switches
	<b>04</b>	Checking the components in the package
	<b>05</b>	Names of each part
Installation and Connection	<b>08</b>	Installing the Camera
	<b>12</b>	Connecting
Network Connection & Setup	<b>18</b>	Connecting the camera to an IP router with local area networking
	<b>20</b>	Connecting the camera directly to local area networking
	<b>21</b>	Searching for the camera
Setting Static IP	<b>22</b>	Manual Network Setting
	<b>25</b>	Automatic Network Setting
Setting Dynamic IP	<b>26</b>	Dynamic IP Setting
	<b>27</b>	Port Forwarding (Port Mapping) Setting

## Using the Camera

28

- 28** Connecting to the camera
- 30** Installing ActiveX
- 32** Using the Viewer Screen
- 36** Using the Search Viewer Screen

## Setting Up

37

- 37** Setting the camera
- 39** Basic Configuration
- 45** System configuration
- 50** Layout Configuration
- 51** Event Configuration
- 58** Network Configuration

## Appendix

60

- 60** Troubleshooting
- 62** Specifications

## FEATURES

### Various Communication Protocol Support

This product supports various communication protocols such as ARP, HTTP and DHCP as well as TCP/IP, UDP, RTP/RTSP, SMTP for Email transmission and FTP protocol.

### Monitoring Through Web Browser

Monitoring Through Web Browser This product enables watching a video through an Internet web browser so that you can watch a video through the Internet as you can within the local network.

### Automatic Local IP Setting Function

This function offers an easy way of configuring the network settings with a minimal key input for those who are not familiar with it.

### Alarm Function

If this product is connected with a motion sensor and the sensor detects a motion, a recorded video clip is sent through the FTP/Email(SMTP) registered by the user or saved on the SDHC memory card and a signal is sent to an alarm output port.

### Motion Detection Function

If the user specifies a target area to monitor and the motion sensor detects a motion within that area, a still image is sent to the FTP/Email(SMTP) server designated by the user or saved on the SDHC memory card, and signals are sent to the alarm output terminal.

## PRECAUTIONS – INSTALLATION AND USE

- Do not disassemble your camera.
- Always be cautious when handling your camera.
- Do not subject the camera to impact or vibration and always be cautious of damaging the camera due to neglectful storage and/or operation.
- Do not install the camera at a location where it would become exposed to rain or humidity and do not operate the camera in a wet environment.
- Do not clean the camera's main body using harsh abrasives or similar substances. If dirty, use a dry piece of cloth to clean instead.
- Install the camera in a shaded area or environment, protected from direct sunlight. Direct sunlight exposure has a negative effect on the camera.
- Do not bend or throw the SDHC memory card.
- Do not store or use the SDHC memory card in a hot, humid, or dusty environment.
- Protect the contacts of the SDHC memory card from foreign substance buildup. If foreign substances have been built up on the contacts, remove using a soft piece of cloth.
- When removing the SDHC memory card, disable SD Card Recording to protect against data loss (refer to page 53 for instruction on disabling SD Card Recording).
- Data cannot be stored on SDHC memory cards whose service life has expired. Please purchase a new SDHC memory card if you experience this.
- The manufacturer will not be held responsible for data loss incurred by the customer due to improper use.
- Using non-recommended PoE device may cause malfunction of either the camera or PoE device itself. (Refer to page 4 for the compatible PoE Switch)

## RECOMMENDED PC SPECIFICATIONS

---

- **CPU:** Pentium4/2.4GHz or higher
- **Operating System:** Windows XP(Service Pack2) / Windows Vista
- **Resolution:** 1024X768 pixels or higher
- **RAM:** 512MB or higher
- **Web Browser:** Internet Explorer 6.0 or higher
- **Video Card:** Radeon, Nvidia
- **Video Memory:** 128MB
- DirectX 8.1 or higher

## COMPATIBLE IP ROUTERS

---

- Linksys
- D-Link
- Netgear

## COMPATIBLE POE SWITCHES

 





---

- Linksys SRW224G4P
- D-Link DES-1316
- SMC SMCPWR-INJ3

## CHECKING THE COMPONENTS IN THE PACKAGE


---

Make sure that the following items are included in the package.

		
Camera	User's Manual	C Mount Adapter Auto Iris Lens Connector
Options		
		
Software CD	CS Lens	C Lens

## NAMES OF EACH PART

### Front

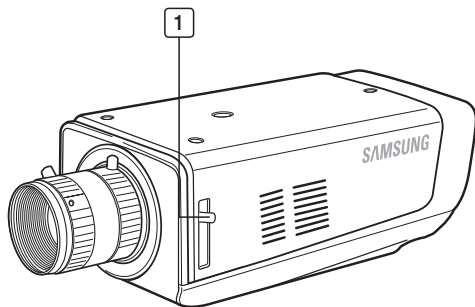



- 1** Back Focus Adjustment Bar Adjust Back Focus by moving this bar up or down.



- When the camera lens becomes dirty, softly clean it with a lens tissue or a cloth soaked in pure ethanol.

## Rear

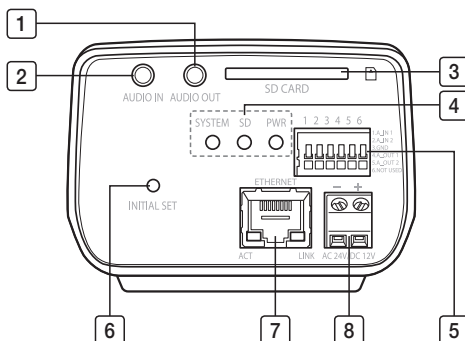

<b>1</b> Audio Out	For outgoing audio signals.
<b>2</b> Audio In	For incoming audio signals.
<b>3</b> SDHC Memory Card Slot	This is where you insert your SDHC memory card.
<b>4</b> System, SD, and Power Indicators	These indicators provide system, SD, and power status information.
<b>5</b> I/O Port	<p>Used to connect the camera to an external device.</p> <ul style="list-style-type: none"> <li>• <b>A_IN 1 and 2:</b> These are alarm in ports.</li> <li>• <b>GND:</b> This is the GND port.</li> <li>• <b>A_OUT 1 and 2:</b> These are alarm out ports.</li> <li>• <b>NOT USED:</b> This port is not used.</li> </ul>
<b>6</b> Reset Button	<p>Reverts all camera settings to their default.</p> <p>When it is pressed for 3 seconds, the system indicator goes out and the system reboots.</p> <p> When the camera is reset, connection is possible only after the basic network settings (IP address, subnet mask, gateway, etc.) have been configured again using the IP installer program.</p>

## 7 Ethernet Port

Ethernet cable port.

Connect the power cable to this port.

## 8 Power Port

LED	Status	Description
SYSTEM	Turns on	When the power is switched on and the network connection is normal.
	Flashes	When the DDNS setting fails.
		When the DDNS is being set.
		When the network connection is not stable.
	Turns off	When the power is switched off.
		When the camera is rebooting.
SD	Turns on	When the memory card is inserted and the system is in normal operation.
	Flashes	When recording fails.
		When the memory card is short of capacity.
		When the memory card is not inserted normally.
	Turns off	When the power is switched off.
		When the camera is rebooting.
When the memory card is removed.		
PWR	Turns on	When the power is switched on.
	Turns off	When the power is switched off.


## INSTALLING THE CAMERA

---

Disconnect the power cord before installation or relocation.


### Mounting the lens

#### When using the CS lens

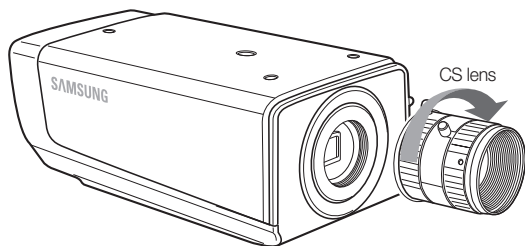

Mount the CS lens by rotating it clockwise as shown in the picture.

#### When using the C lens

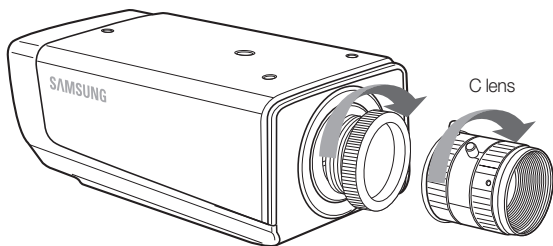

After mounting the C-mount adapter by rotating it clockwise, turn the C lens clockwise until it is fixed as shown in the picture.



## Adjusting the back focus


The back focus of the camera is adjusted at the factory before delivery but some lenses can be out of focus depending on the lens type. In this case, you have to adjust the back focus. The following describes how to adjust the back focus of the lenses.

### In case of the lens with no zooming function

- 1 After exposing the camera to an object with high resolution (like a dart-patterned image) at a distance of more than 10m, set the lens focus ring to infinite ( $\infty$ ).
- 2 Adjust the Back Focus Control Bar until the object is of best quality.
- 3 Fix the screw of the Back Focus Control Bar.

### In case of the lens with zooming function


- 1 After exposing the camera to an object with high resolution (like a dart-patterned image) at a distance of 3 to 5m, fully rotate the lens zoom to the TELE direction. Then adjust the lens focus ring until the object is of best quality.
- 2 Fully rotate the lens zoom to the WIDE direction and adjust the Back Focus Control Bar until the object is of best quality.
- 3 Repeat step 1 and 2 two or three times until the focuses of Zoom TELE and Zoom WIDE are clear enough.

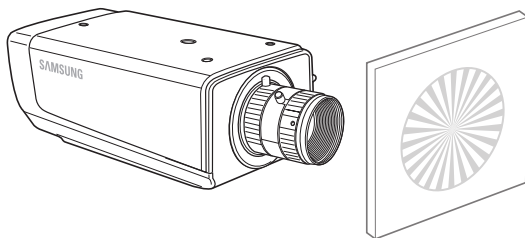

## Inserting/Removing an SDHC Memory Card

### Inserting an SDHC Memory Card


Push the SDHC memory card in the direction of the arrow shown in the diagram.

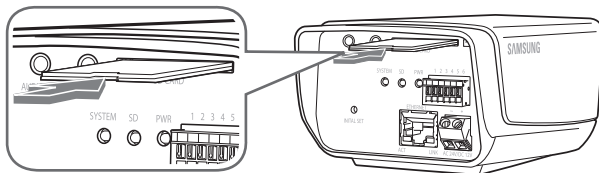

- Do not force the memory card in. If you can't insert the memory card into the slot with ease, you might be inserting the card in the wrong direction. Forcibly inserting a memory card could lead to its damage.

### Removing an SDHC Memory Card

Gently press down on the exposed end of the memory card as shown in the diagram to eject the memory card from the slot.

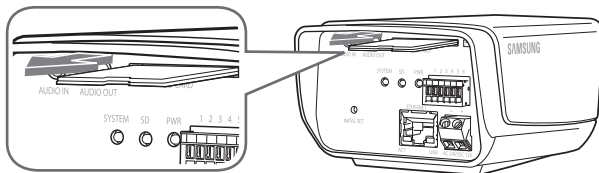

- Pressing too hard on the SDHC memory card can cause the card to shoot out uncontrollably from the slot when released.
- When removing the SDHC memory card, disable the SD Card Recording feature (refer to page 53 for instructions on disabling SD Card Recording). Removing the SDHC memory card while recording is in progress can damage the data.

## Memory Card Information (not included)

### What is a memory card?

The memory card is an external data storage device that has been developed to offer an entirely new way to record and share video, audio, and text data using digital devices.

### Selecting a memory card that's suitable for you

Your camera supports SDHC memory cards.

You may, however, experience compatibility issues depending on the model and make of the memory card.

Your camera supports SD memory cards.

However, the maximum supported SD memory card capacity is 2GB and ver 1.1, 4GB or above SD memory cards are incompatible.

For your camera, we recommend you use a memory card from the following manufacturers: SDHC/SD Memory Card: Panasonic®, SanDisk®, and Toshiba®


Your camera supports 128MB to 16GB of memory card capacity.

Playback performance can be affected depending on the read/write speed of the memory card, so use a high-speed memory card. We recommend you use a memory card with a read/write speed of at least 10Mbps and Class 6 specifications.

### Memory Card Use

SD and SDHC memory cards feature a switch that disables writing data on to the media. Having this switch to the Lock position will prevent accidental deletion of data stored in the memory card but at the same time will also prevent you from writing data on to the media.

### Memory Card Components

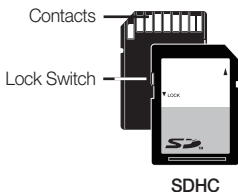


## CONNECTING


---

### Connecting Ethernet Cable

Connect the Ethernet cable to the network port as shown.

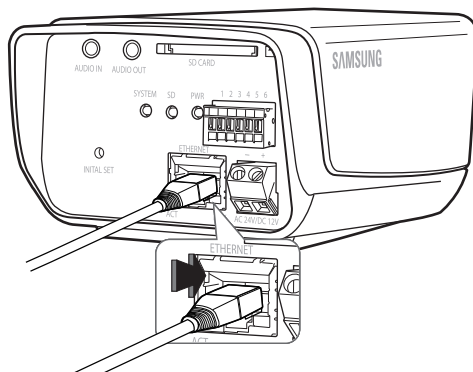

## Connecting Power

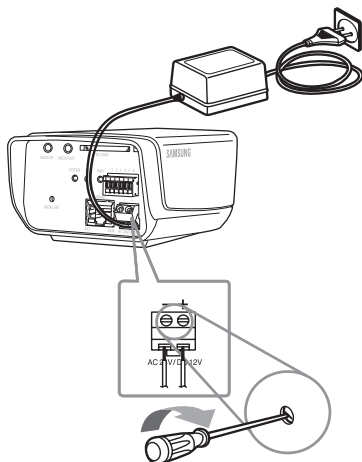


- 1 Connect the power adapter to the camera's power port.
- 2 Using a flathead screwdriver, connect the two lines leading from the power adapter to the camera's power port.
- 3 Connect the power cord to the power adapter unit.
- 4 Connect the power plug to a power outlet.



- Beware of DC 12V's polarity charges when making the connection.
- If you are using a PoE (Power over Ethernet) supporting router, you do not need a separate power source.

To connect input and output ports:

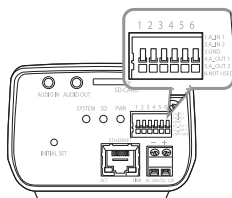


Connect alarm lines to the input and output ports on the rear.

**A\_IN 1, A\_IN 2** : These are alarm in ports.


**GND** : This is the GND port.

**A\_OUT 1, A\_OUT 2** : These are alarm out ports.

## Alarm In/Out Connection Diagram

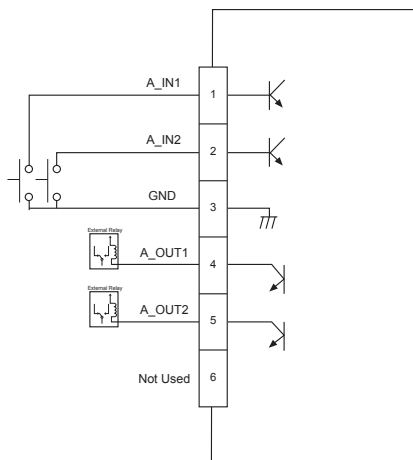

## Connecting to Audio Input/Output

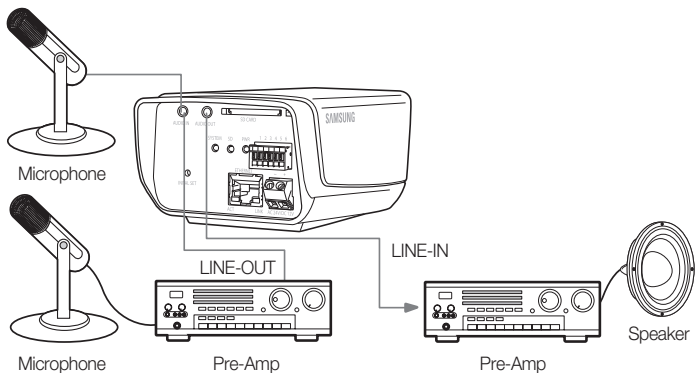


- 1 Connect the **AUDIO IN** port of the camera with the microphone directly or **LINE OUT** port of the amplifier that the microphone is connected to.

**Direct Mic Connection:** Set Audio Input Gain high (10). (Refer to page 39)

**Line Out Connection:** Set Audio Input Gain low (1). (Refer to page 39)

- 2 Connect the **AUDIO OUT** port of the camera with the **LINE IN** port of the speaker.

## Audio I/O Block Diagram

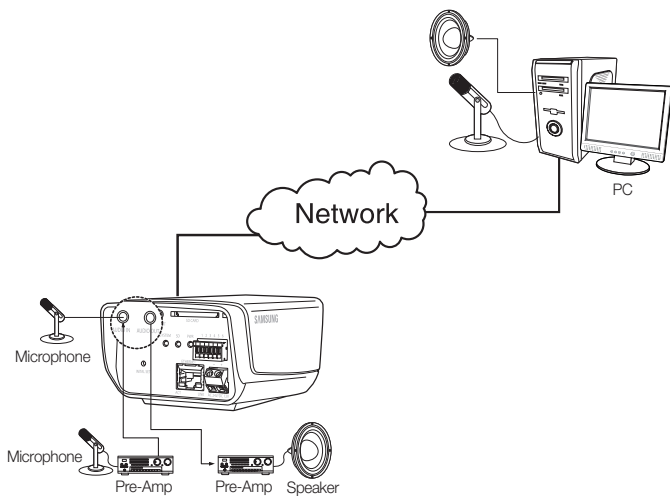

- **Audio Codec**  
G.711 PCM,  $\mu$ -law 64kbps 8kHz sampling
- **Full duplex Audio**
- **Audio in**  
Used for mono signal line input (Max.2.4 Vpp)
- **Audio out**  
Used for mono signal line output (Max.2.4 Vpp)
- **Line out impedance**  
600ohm



# network connection & setup

You can set up the network settings according to your network configurations.

## Network connection and setup processes are given as follows.

- Connect the camera to an IP router with local area networking Page 18~19
- Connect the camera directly to local area networking Page 20




- Compliant IP routers are as listed below.
  - Linksys
  - D-Link
  - Netgear
- Compliant PoE Switches are as listed below.
  - Linksys SRW224G4P
  - D-Link DES-1316
  - SMC SMCPWR-INJ3
- Using non-recommended IP router may cause the network connection error.
- Depending on the performance of the PC (Viewer installed) or the network, the video transmission can be delayed or even disconnected.  
For soft video transmission, you can set the bandwidth in <NETWORK> → <STREAMING SETUP> in the setup menu.



- The IP and MAC addresses used in this manual are for illustrative purposes only. Therefore, you must refer to Notice the network settings of your PC and do not enter the addresses presented in this manual.

## CONNECTING THE CAMERA TO AN IP ROUTER WITH LOCAL AREA NETWORKING

This is for a large network environment such as corporate office, building, public office and factory.

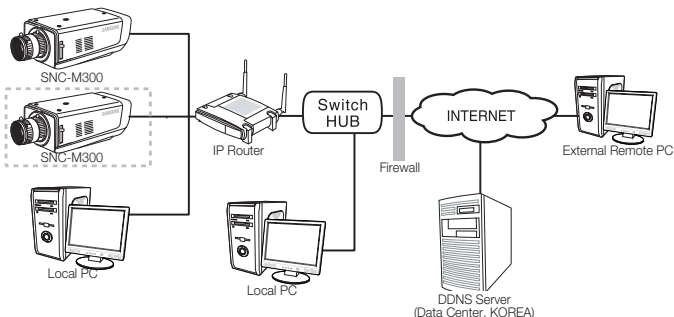

### [STEP 1] Configuring the network settings of the local PC connected to an IP router

Configuring the network settings of the local PC connected to an IP router, follow the instructions below.

- Select : <Network Neighborhood> → <Properties> → <Local Area Connection> → <Properties> → <General> → <Internet Protocol (TCP/IP)> → <Properties> → <Obtain an IP address automatically> or <Use the following IP address>
- Follow the instructions below if you select <Use the following IP address>:

ex1) If the address (LAN IP) of the IP router is 192.168.1.1

IP address: 192.168.1.100

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.1.1

ex2) If the address (LAN IP) of the IP router is 192.168.0.1

IP address: 192.168.0.100

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.0.1

ex3) If the address (LAN IP) of the IP router is 192.168.xxx.1

IP address: 192.168.xxx.100

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.xxx.1




- For the address of the IP router, refer to the product's documentation.

## [STEP 2] Setting the IP address


- Refer to "Static IP Setting" on page 22 or "Dynamic IP Setting" on page 26.

## [STEP 3] Connecting a local PC in the IP router to the camera

- Run the IP Installer on your local PC and search for the camera.
- If found, double-click the camera to start the Internet browser and try to connect to the camera. Alternately, launch the Internet browser manually and enter the IP address of the camera found in the address bar to connect to it.  
ex) <http://192.168.1.2>

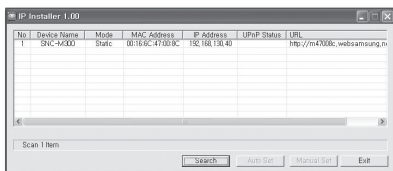


## [STEP 4] Connecting to the camera from an IP router external PC

- An IP router external PC can't use the IP Installer to search for an IP router internal camera. This is because the IP Installer does not work in a network where the gateway is different.
  - In this case, you can use the DDNS URL of the camera or the Internet IP address of the IP router to connect to the IP router internal camera.
  - However, you must set the port-forwarding for the IP router before you can connect to the IP router internal camera from a remote PC. For more information on the port-forwarding, refer to Use IP Router: Port Forwarding Setting (Port Mapping).
  - When the port forwarding is done, run the Internet browser on the IP router External PC and enter the DDNS URL address or, the Internet IP address of the IP router in the address bar for connecting to the camera.  
ex) <http://mffe42.websamsung.net>
    - For the DDNS URL address, refer to "Checking the DDNS address" on page 29.
-  A remote PC in an external Internet out of the LAN network may not be able to connect to the camera installed in the intranet if the port-forwarding is not properly set or a firewall is set. In this case, to resolve the problem, contact your network administrator.

## CONNECTING THE CAMERA DIRECTLY TO LOCAL AREA NETWORKING

---

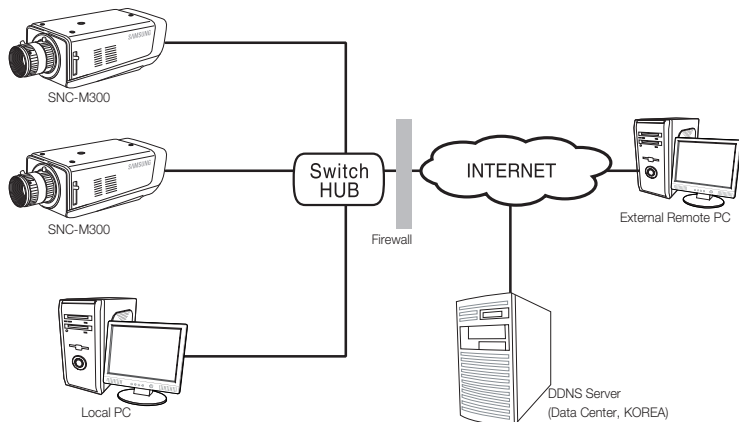

### Connecting to the camera from a local PC in the LAN

- 1 Launch an Internet browser on the local PC.
- 2 Enter the IP address of the camera in the address bar of the browser.



- A remote PC in an external Internet out of the LAN network may not be able to connect to the camera installed in the intranet if the port-forwarding is not properly set or a firewall is set. In this case, to resolve the problem, contact your network administrator.



## MANUAL NETWORK SETTING

Run the <IP Installer.exe> program and display the camera list found on the screen.  
For the initial run, the [Auto Set] and [Manual Set] button are all disabled.

1 Select a camera you want from the camera list.

- Confirm the MAC Address of the camera on its rear panel.
- The [Auto Set] and [Manual Set] button are activated.

2 Click the [Manual Set] button.

- The Manual Set window appears.
- The <IP Address>, <Subnet Mask>, <Gateway> and <HTTP Port> values of the camera are displayed in their default values.
- The password is set to "4321" by factory default.

3 Set up the IP related settings in the <ADDRESS> field.




- <MAC Address>: The MAC Address printed on the camera rear panel is automatically displayed. No additional setting is required.

<If using an IP router>

- <IP Address>: Set it according to the private IP address range provided by the IP Router.  
ex) 192.168.1.2~254, 192.168.0.2~254, or 192.168.XXX.2~254
- <Subnet Mask>: The IP Router's <Subnet Mask> becomes camera's <Subnet Mask> value.
- <Gateway>: The IP Router's <LAN IP Address> becomes camera's <Gateway> value.

<If not using an IP router>

- For the <IP Address>, <Gateway> and <Subnet Mask> settings, contact your network administrator.

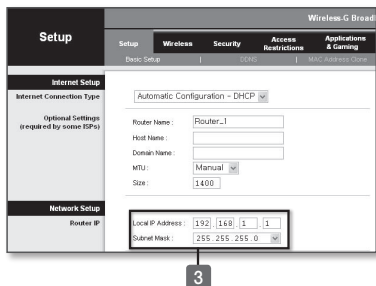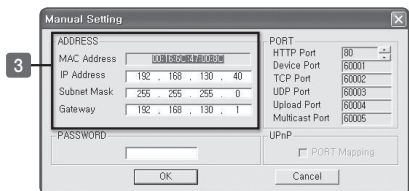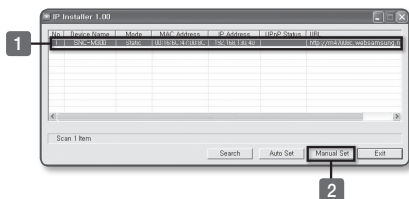




- You can't change the port numbers of Device, TCP, UDP, Upload and Multicast, which are automatically changed according to the increase/decrease of the port number of HTTP.

#### 4 In the <PORT>fields, set up port numbers.

- **<HTTP Port>**: A HTTP port used to connect to a camera using the Internet browser. The default value is 80. The HTTP port value can be changed by using the up/down button to the right. The HTTP port number starts with 80 and increases/decreases to 10000, 10006, 10012...
- **<Device Port>**: A port used to control video transmission. The default value is 60001(TCP).
- **<TCP Port>**: A port used to transfer video using TCP protocol. The default value is 60002(TCP).
- **<UDP Port>**: A port used to transfer video using UDP protocol. The default value is 60003(UDP).
- **<Upload Port>**: A port used to upgrade software. The default value is 60004(TCP).
- **<Multicast Port>**: Shows UDP port set for video transmission using UDP Multicast. The default value is 60005(UDP).

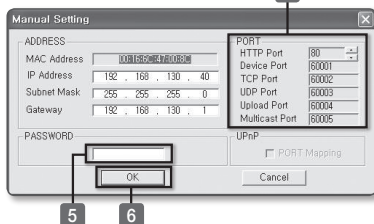

#### 5 Enter your password.

- The default password is "4321".
- The password is the camera login password of the root user.

#### 6 Click the [OK] button.

- The manual network setting is finished.

#### 7 The camera is set to the manually entered IP and is restarted.

## If more than one camera are connected to an IP Router

Set the IP and port settings for camera differently.

Items		1st Camera	2nd Camera
IP Related Items	IP Address	192.168.1.200	192.168.1.201
	Subnet Mask	255.255.255.0	255.255.255.0
	Gateway	192.168.1.1	192.168.1.1
Port Related Items	HTTP Port	80	10000
	Device Port	60001	10001
	TCP Port	60002	10002
	UDP Port	60003	10003
	Upload Port	60004	10004
	Multicast Port	60005	10005



- If <HTTP Port> is not set to 80, the user must specify the port number as well as the IP address in the Address input box of an Internet browser to connect to the camera.

Example) http://IP Address: HTTP Port



e.g.) http://192.168.1.201: 10000



## AUTOMATIC NETWORK SETTING

Run the <IP Installer.exe> program and display the camera list found on the screen.  
For the initial run, the [Auto Set] and [Manual Set] button are all disabled.

- 1 Select a camera you want from the camera list.
  - Confirm the MAC Address of the camera on its rear panel.
  - The [Auto Set] and [Manual Set] button are activated.
- 2 Click the [Auto Set] button.
  - The Auto Set window appears.
  - The automatically found <IP Address>, <Subnet Mask> and <Gate Way> are displayed.
- 3 Enter your password.
  - The password is the camera login password of the root user.
  - The default password is "4321".
- 4 Click the [OK] button.
  - The automatic network setting is finished.
- 5 The camera automatically restarts when the network setting is complete.

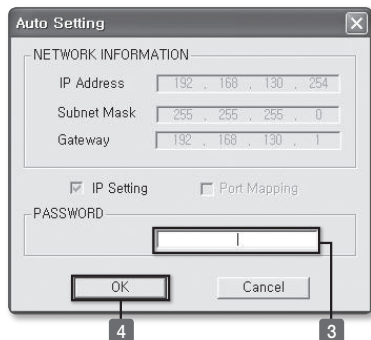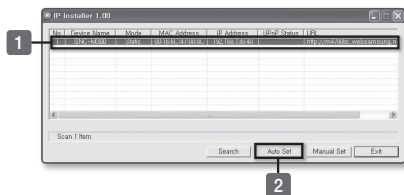


# setting dynamic ip

## DYNAMIC IP SETTING


### Examples of using Dynamic IP

- If the camera is installed on an IP router and obtains an IP using DHCP
- If the camera is connected directly to a xDSL/Cable modem using DHCP
- If an IP is allocated by the internal DHCP server in local area networking

### Dynamic IP Check

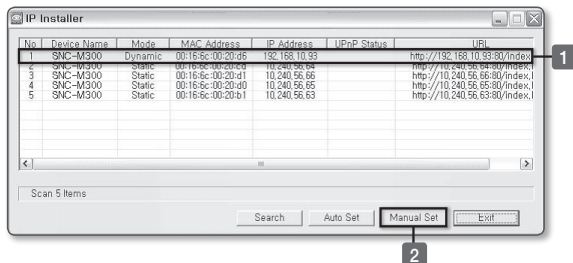

- 1 When you run the IP Installer on your local PC, the camera with a dynamic IP allocated is listed.
- 2 Select the camera in the list and click the **[Manual Set]** button to check the camera for the current dynamic IP.

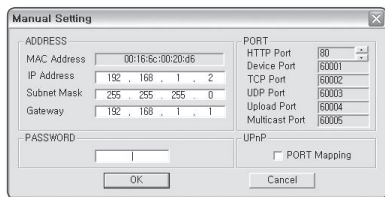

- In this case, the ADDRESS field is automatically filled and you can't change it. However, you can still change the port settings.

## PORT FORWARDING (PORT MAPPING) SETTING

With the camera installed on an IP router, you must set the port forwarding for the IP router before an IP router external remote PC can connect to the IP router internal camera.

### Manual Port Forwarding

1 Click **<Applications & Gaming>** → **<Port Range Forward>** from the Settings menu of the IP Router.



- For the menu location and the setting of Port Forwarding, refer to the IP router's documentation.

2 Select the **<TCP>** and **<UDP Port>** for each camera connected to the IP Router.

- Each of the port numbers for the IP Router must be according to those presented in **<BASIC>** → **<IP>** of the SETUP screen of the camera.

3 If the setting is complete, click the **[Save Settings]** button.


- The changes are saved.

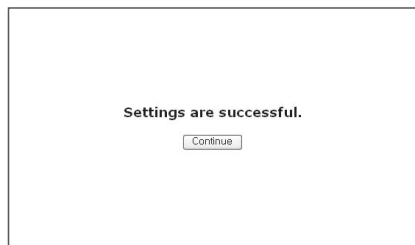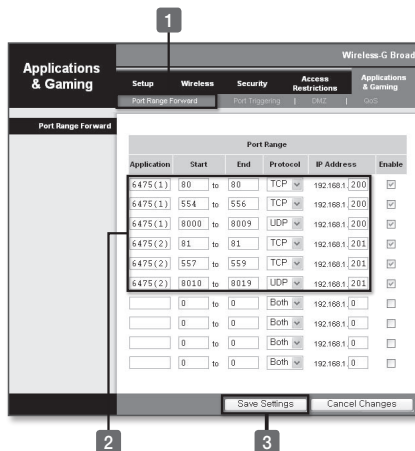

## CONNECTING TO THE CAMERA

---

### Connecting to the camera

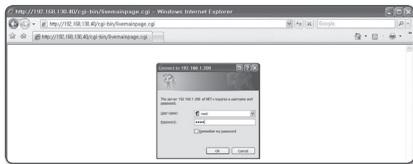

#### General

- Run an Internet browser.
- Enter the IP address for the camera in the Address input box.  
Example) IP Address: 192.168.1.200 → http://192.168.1.200
  - The login window appears.

#### If the HTTP port number is not 80

- Run an Internet browser.
- Enter the IP address and the HTTP port number for the camera in the Address input box.  
Example) IP Address: 192.168.1.200:Port Number(10000) → http://192.168.1.200:10000
  - The login window appears.

#### Connection using URL

- Run an Internet browser.
- Enter the DDNS URL for the camera in the Address input box.  
Example) URL Address: http://mfffe42.websamsung.net
  - The login window appears.

#### Connection using URL (If the HTTP port number is not 80)

- Run an Internet browser.
- Enter the DDNS URL and the HTTP port number for the camera in the Address input box.  
Example) URL Address: http://mfffe42.websamsung.net:Port Number(10000) →  
http://mfffe42.websamsung.net:10000
  - The login window appears.

## Checking the DDNS address

- A DDNS address consists of <One among from lower-case alphabet characters of c, m and p> + <Last 6 digits of the MAC address> + <websamsung.net>.
- The lower-case alphabet letter is represented as <c> if the first 6 digits of the MAC address is <00:00:f0>, <m> if <00:16:6c>, and <p> if <00:68:36>.

Example) - If the MAC address of the camera is 00 : 00 : f0 : ff : fe : 42 :

c + fffe42 + websamsung.net = cffe42.websamsung.net

- If the MAC address of a camera is 00 : 16 : 6c : ff : fe : 42 :  
m + fffe42 + websamsung.net = mffe42.websamsung.net

- If the MAC address of a camera is 00 : 68 : 36 : ff : fe : 42 :  
p + fffe42 + websamsung.net = pffe42.websamsung.net




- The IP and MAC addresses are used in this manual for illustrative purposes only. Therefore, you must not enter Notice the addresses presented in this manual when you setting your equipment.

## Connecting to the camera using the IP Installer program

Double-click a camera you want from the search result screen.

- The login window appears.
- If the ActiveX window appears, install it referring to the next page.

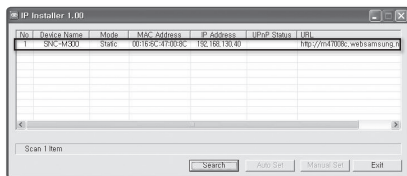


## INSTALLING ACTIVEX

If you connect the camera to the Internet and configure the network settings, you can monitor the picture of the connected camera in real-time.

### For Windows XP Service Pack 2

- 1 If the following screen appears, click the Install button.
- 2 Click the <Install ActiveX Control>.
- 3 If the Security Warning window appears, click the [Install] button.

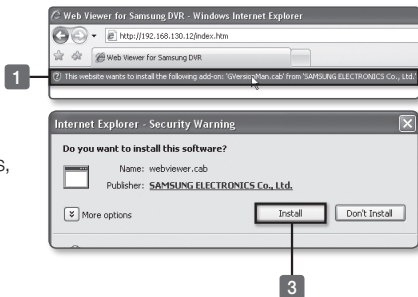

- For successful installation, disable the pop-up blocker by going to the option below.  
Internet Explorer → Tools → Pop-up blocker → Always Allow Pop-ups from This Site

## Logging to the camera

For the first login, the username is “root” and password is “4321”.


**1** Type “root” in the <User name> input box.

**2** Type “4321” in the <Password> input box.

- If you have changed the old password, type the new password here.

**3** Click the [OK] button.

- When the login is complete, the camera Viewer screen appears.

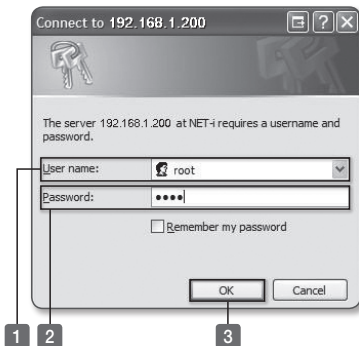

- For the security purposes, make sure to change the password by clicking <BASIC> → <USER> in the SETUP screen.  
The administrator ID, root is fixed and cannot be changed.
- If you check the <Remember my password>, the username and password are saved and will be entered automatically in the login window.



- You are required to install DirectX 8.1 or later on your Windows-based PC.
- You can download DirectX for free at <http://www.microsoft.com/download>
- When using Internet Explorer 7, the viewer screen is optimized with page zoom to 100%. Changing the size of the page zoom will only show portion of the page.

## USING THE VIEWER SCREEN


If you connect to the camera, the following Viewer screen appears.

### Main Screen Layout




Name	Function and Description
1 SEARCH	Moves to the search screen.
2 SETUP	Moves to the setup screen.
3 ABOUT	Displays the information, version, manufacturer, etc.
4 VIEW	Sets the video format and de-interlace.



Name	Function and Description
<b>5</b> BACKUP	<ul style="list-style-type: none"> <li>• Capture : Captures the recorded image on the screen and saves it as a .jpeg or .bmp image file.</li> <li>• Print : Prints the recorded image on the screen.</li> <li>• Record : Saves the recorded video as a .avi video file.</li> </ul>
<b>6</b> IO	Sets the alarm reset.(The alarm or motion icon will disappear.)
<b>7</b> Audio	Check the Listen or Speak check box for Audio.
<b>8</b> View Screen	Displays the recorded video on live screen. <ul style="list-style-type: none"> <li>•  : Displays the live screen in full screen.</li> </ul>

## To Capture a Video

- 1 At a desired scene, click the **[CAPTURE]** button.
  - The capture confirmation window appears.
- 2 Click **[OK]**.
  - The captured screen image is saved in the specified folder path.

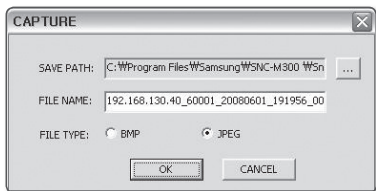


- **Default save paths are provided for each version of Windows.**  
Windows XP: C:\Program Files\Samsung\SNC-M300\SnapShot\Live  
Windows Vista: C:\users\[user ID]\AppData\LocalLow\Samsung\SNC-M300\SnapShot\Live  
To change the saving path, click **[SAVE PATH]** button (...) and then select the path you want.
- The file is automatically named as follows: <IP address\_Port number\_YYMMDD\_camera number\_index>  
Example) 192.168.130.40\_60001\_20080601\_203523\_00



- The save path cannot be changed if you are using Windows Vista.


## To Print a Video

- 1 At a desired scene, click the **[PRINT]** button.
  - The print setup window appears.
- 2 Click **[OK]**.  
The captured screen image is printed.

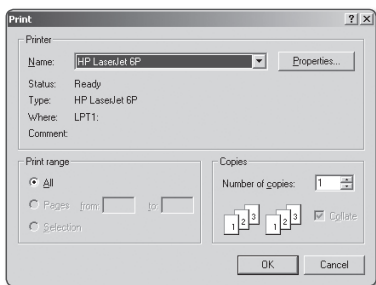

## To Record a Video

- 1 At desired scene, click the **[RECORD]** button.
- 2 Set up the AVI save.
  - 2-1 Destination Folder:  
Allows you to change the file save path.
  - 2-2 File Name:  
Allows you to change the name of the file.
  - 2-3 Insufficient Disk Space Setting:  
Recording automatically stops if the amount of space available on the hard disk falls below the amount designated under this setting.
- 3 Click **[OK]**.
  - On the viewer screen, <REC> indicator appears and the recording is started.
  - The captured screen image is saved in the specified saving path.
- 4 To stop a recording, click the **[RECORD]** button once again.

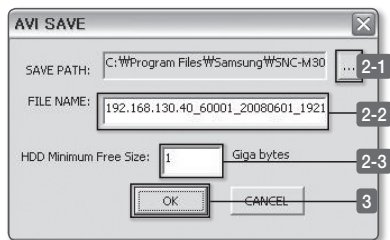

- **Default save paths are provided for each version of Windows.**  
Windows XP: C:\Program Files\Samsung\SNC-M300\VidedClip\Live  
Windows Vista: C:\users\[user ID]\AppData\LocalLow\Samsung\SNC-M300\SnapShot\Live  
To change the saving path, click **[SAVE PATH]** button (...) and then select the path you want.
- The file is automatically named as follows: <IP address\_Port number\_YYMMDD\_camera number\_index>  
Example) 192.168.130.40\_60001\_20080601\_203523\_00
- If the inappropriate video codec is installed on your computer, the video will not be played properly.




- The save path cannot be changed if you are using Windows Vista.

## USING THE SEARCH VIEWER SCREEN

If you connect to the camera, the following Search Viewer screen appears.

### Main Screen Layout

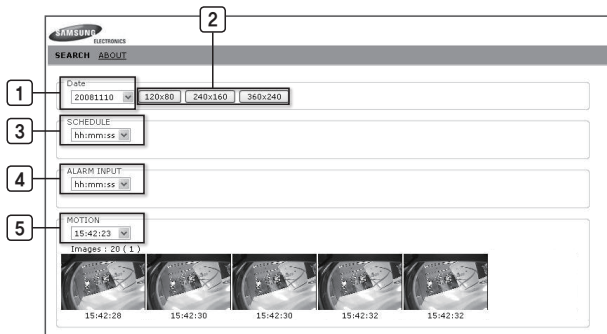

Name	Function and Description
1 Date	You can select the desired date to search for events generated.
2 Thumbnail Size	The thumbnail images are displayed based on the selected size.
3 SCHEDULE	You can select the desired time to search the schedule events.
4 ALARM INPUT	You can select the desired time to search the alarm events.
5 MOTION	You can select the desired time to search the motion detection events.


# setting up

## SETTING THE CAMERA


You can set various functions such as Basic Setting, System, Layout, etc.

### To set up the camera


In the viewer screen, click the **[SETUP]** tab.

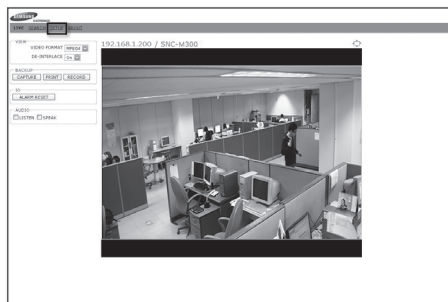

The setup window appears.

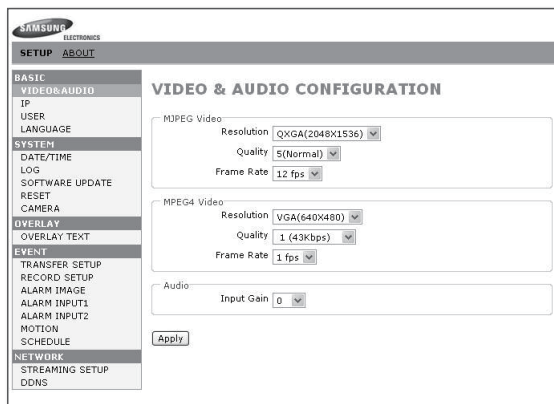

## SETUP Screen Layout

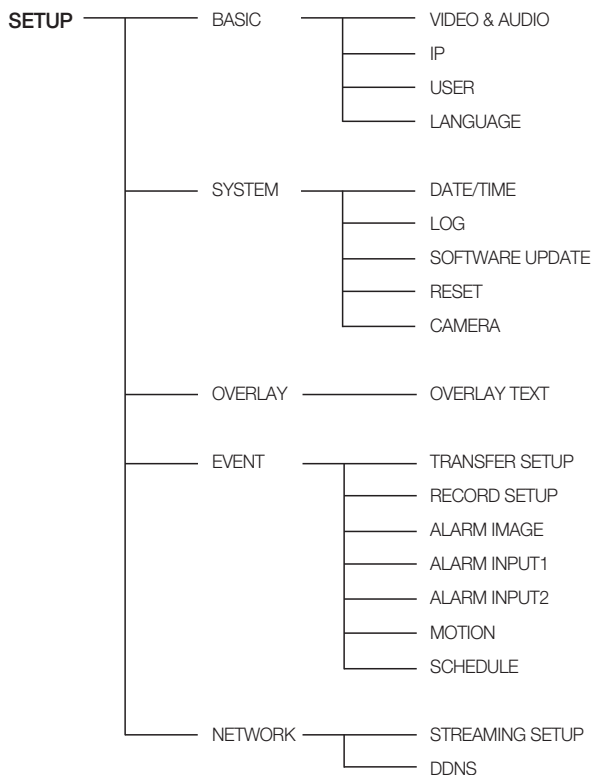

## BASIC CONFIGURATION

### To setup Video/Audio

You can set the video resolution, quality, frames per second, and input gain.

**1** Click **<BASIC>** → **<VIDEO & AUDIO>**.


- The VIDEO & AUDIO window appears.

**2** To complete the video setting, click the **[Apply]** button.

- The settings are saved.



- You will not be able to hear the audio data if the audio input gain is at zero.

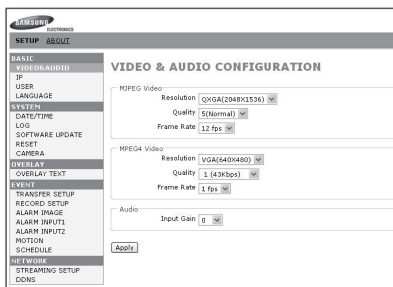

- <Resolution>**: Select a video size from the options shown below.  
**MJPEG**: QXGA(2048x1536), UXGA(1600x1200), SXGA(1280x1024)  
**MPEG**: VGA(640x480)
- <Quality>**: Select a video quality level between 0 and 10.
- <Frame Rate>**: Select a frame rate.  
**MJPEG**: QXGA(12ips, 6ips, 3ips, 1ips, Auto), UXGA(19ips, 10ips, 5ips, 1ips, Auto), SXGA(25ips, 13ips, 6ips, 1ips, Auto)  
**MPEG**: QXGA(12ips, 6ips, 3ips, 1ips, Auto), UXGA(19ips, 10ips, 3ips, 1ips, Auto), SXGA(25ips, 13ips, 3ips, 1ips, Auto)
- <Input Gain>**: Select the audio amplification level between 0 and 10




- If the frame rate of MJPEG is at its maximum value, the frame rate of MPEG can only be set to 3 ips or 1 ips.

## To Setup IP settings

- 1 Click **<BASIC>** → **<IP>**.
  - IP Setting window appears.
- 2 To complete the setting, click the **[Apply]** button.
  - The settings are saved and the system is restarted.
  - The currently opened web browser is closed.



- When two or more cameras are connected to a single IP sharing device, IP-related settings and port-related settings should be configured differently.

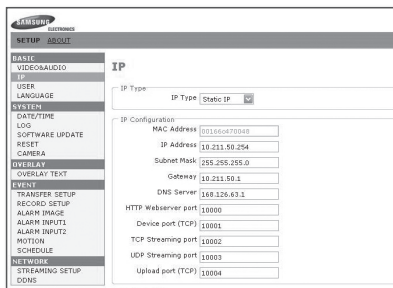


- **<IP Type>**: Shows the current camera IP setting type.
  - Select the IP setting type from **<Static IP>** or **<Dynamic IP>**.
- **<IP Configuration>**: Allows setting the camera and port related settings.
  - **<MAC Address>**: Shows the Ethernet MAC address. Since this value is used to create a DDNS address, confirm the value.
  - **<IP Address>**: Shows the currently configured IP address. If the **<IP Type>** is set to **<Static IP>**, you can change the IP address.
  - **<Subnet Mask>**: Shows the **<Subnet Mask>** for the configured IP address.
  - **<Gateway>**: Shows the **<Gateway>** address for the configured IP address.
  - **<DNS Server>**: Shows the IP address of the DNS (Domain Name Service) server.
  - **<HTTP Webserver Port>**: Shows the HTTP port used to connect to the camera using the web browser. The default port number is 80(TCP).
  - **<Device Port(TCP)>**: A port used to control video transmission. The default value is 60001(TCP).
  - **<TCP Streaming Port>**: A port used to transfer video using the TCP protocols. The default value is 60002(TCP).
  - **<UDP Streaming Port>**: A port used to transfer video using the UDP multicast protocols. The default value is 60003(UDP).
  - **<Upload Port(TCP)>**: A port used to upgrade software. Default value is 60004(TCP).
- **<Multicast Settings>**: To transmit a video using UDP Multicast, you can set the IP address, port and TTL.
  - **<Multicast Address>**: Shows IP address set for video transmission using UDP Multicast. The default value is 225.128.1.128. It is recommended to set it to between 224.0.0.0 and 239.255.255.255.
  - **<Multicast Port>**: Shows UDP port set for video transmission using UDP Multicast. The default value is 60005(UDP).
  - **<TTL>**: TTL stands for "Time To Live" that allows you to set the number of routers so that the packet can pass through. Each router decrease the TTL value one by one when a packet passes it through. If the TTL value reaches 0, the packet cannot pass through a router. The default value is 63. It is recommended to set it to between 0 and 255.



## To Setup Users

- 1 Click **<BASIC>** → **<USER>**.
  - The USER window appears.
- 2 To complete the setting, click the **[Apply]** button.
  - The settings are saved and the system is restarted.
  - The currently opened web browser is closed.

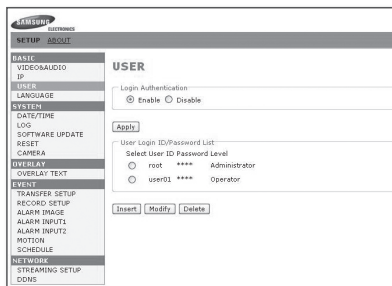

- **<Login Authentication>**: You can determine whether to require login authentication for users.
  - If it is set to **<Enable>**, the users can connect to the system through login authentication, while it is set to **<Disable>**, the users can connect to the system without login authentication. However, users connected to the system without login have USER permission.
  - When the setting is complete, click the **[Apply]** button.
- **<User Login ID/Password List>**: Shows user ID, password and level (permissions) in a list.
  - You can register up to 10 users.
  - The default administrator ID is root.
  - **<Administrator>** cannot be deleted or added and you can change the password only.

To register an user

- 1 In the USER window, click the **[Insert]** button.
  - The <Insert User> window appears.
- 2 Enter user ID and password.
  - For the ID and password, up to 9 alphanumeric and some special characters are allowed.
- 3 Select the user permission.
  - Select a user permission for the new user from the <Operator> and <User> in the Level field.
- 4 Click the **[Apply]** button.
  - The user registration is completed.

The screenshot shows a dialog box titled "Insert User". It contains the following fields and controls:

- User ID:** A text field containing "user01".
- Password:** A text field with masked characters (dots).
- Confirm Password:** A text field with masked characters (dots).
- Level:** A dropdown menu currently showing "Operator".
- Buttons:** "Apply" and "Cancel" buttons at the bottom.

Numbered callouts are present:


- 2:** Points to the "User ID" field.
- 4:** Points to the "Apply" button.
- 3:** Points to the "Level" dropdown menu.



- You cannot register a duplicated user ID.
- You cannot register root or guest user ID.

## To modify a registered user account

- 1 Select the **<Select>** check box of a user account to be modified in the USER window.
- 2 Click the **[Modify]** button in the USER window.
  - The **<Modify User>** window appears.
- 3 In the window, modify **<User ID>**, **<Password>**, **<Confirm Password>** or **<Level>** of the user account.
- 4 Click the **[Apply]** button.
  - Modifying a registered user is complete.

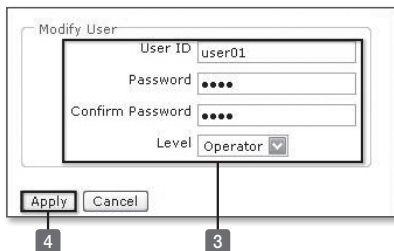

## To delete a registered user account

- 1 Select the **<Select>** check box of a user account to be deleted in the USER window.
- 2 Click the **[Delete]** button in the USER window.
  - Deleting a registered user is complete.



### • About User Level

- <Administrator>**: The Administrator can use all functions and change the setup or search.
- <Operator>**: The Operator can use all functions except setup and playback functions.
- <User>**: The User can monitor video only.


## To set the display language

### 1 Click <BASIC> → <LANGUAGE>.

- The LANGUAGE window appears where you can select a preferred language.
- You can select once from 7 languages (English/Korean/Chinese/French/Italian/Spanish/German).

### 2 To complete the setting, click the [Apply] button.

- The language has been changed to the selected one.

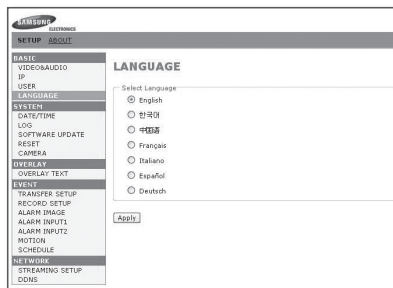

## SYSTEM CONFIGURATION

### To set date/time


You can get the current system time from a NTP server or a PC and set the system time.

#### 1 Click <SYSTEM> → <DATE/TIME>.

- The DATE/TIME window appears.

#### 2 To complete the setting, click the [Apply] button.

- The settings are saved.

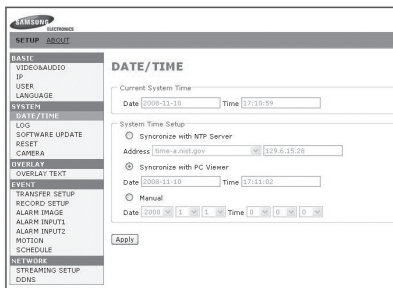

- The date can be configured between 1 January 2000 and 31 December 2037.

- <Current System Time>: Shows the time according to the setting of System Time Setup.
- <System Time Setup>: You can set the time synchronized with NTP server (time server) or PC, or manually setup.

## To setup the system time

- 1 Select one of the NTP server addresses of the **<Address>** list, or click **<Synchronize with PC Viewer>**.
- 2 Set the date and time directly if you select **<Manual>**.
- 3 Click the **[Apply]** button.
  - The setting time is applied.

System Time Setup

☐ Synchronize with NTP Server

Address

☐ Synchronize with PC Viewer

Date  Time

☒ Manual

Date     Time



- NTP Server IPs are provided by a public agency and their list is therefore subject to change.
- In a local network, a separate NTP server must be manually defined.


 


- The current time can vary depending on the computers regional (GMT and DST) and country (PC time configuration) settings.

## To view the log information

Click <**SYSTEM**> → <**LOG**>.

- The Log window appears showing log information.

**SETUP** ABOUT

**BASIC**  
 VIDEOAUDIO I/O  
 IP  
 USER  
 LANGUAGE  
**SYSTEM**  
 DATE/TIME  
 LOG  
 LOGIC  
 SOFTWARE UPDATE  
 RESET  
 CAMERA  
**OVERLAY**  
 OVERLAY1 TEXT  
**EVENT**  
 TRANSFER SETUP  
 RECORD SETUP  
 ALARM IMAGE  
 ALARM INPUT1  
 ALARM INPUT2  
 MOTION  
 SCHEDULE  
**ADVANCED**  
 ADVANCED SETUP  
 DDMS

## LOG

System Log List:

Time	Previous	3/6/	Next	Last	Time	Item	IP
2000-5-8 08:28:05						User login	10.211.50.121
2000-5-8 07:39:27						User login	10.211.50.121
2000-5-8 07:38:50						Network is up	10.211.50.254
2000-5-8 07:30:42						System started	10.211.50.254
2000-5-8 07:30:43						Network param. changed	10.211.50.254
2000-5-8 07:30:46						Network is up	192.168.1.200
2000-5-8 07:30:38						System started	192.168.1.200
2000-5-5 03:30:14						System reset	10.204.54.214
2000-5-5 03:35:54						User login	10.204.54.214
2000-5-5 03:35:50						Network is up	10.204.54.73
2000-5-5 03:35:41						System started	10.204.54.73
2000-5-5 03:35:03						Network param. changed	192.168.0.1
2000-5-5 03:30:45						Network is up	10.211.50.253
2000-5-5 03:34:37						System started	10.211.50.253
2000-5-5 03:34:47						System started	10.211.50.253
2000-5-5 03:34:47						Network is up	10.211.50.253
2000-5-5 03:34:53						Network is up	10.211.50.253

- **<System Log List>**: Shows the log information about the system changes along with time and IP address.
- **<User Log In>**: Shows current camera login user.
- **<Video Configuration Change>**: Shows video setting changes.
- **<System Time Change>**: Shows time changes.
- **<System Start>**: Shows time when the camera is turned on.




- The maximum number of logs that can be recorded is 2,000.
- If the number goes over 2,000, new logs are added and the bottom-most logs are deleted.

## To update the software

Click **<SYSTEM>** → **<SOFTWARE UPDATE>**.

- The Software Update window appears.

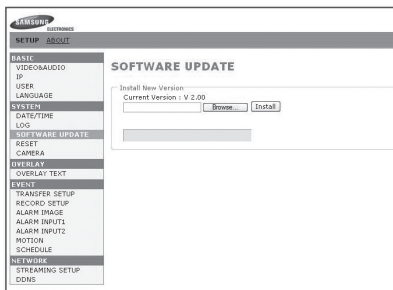

## To update the software

**1** In the USER window, click the **[Browse]** button.

- The Open File window appears.

**2** Select an update file and click the **[Open]** button.

**3** In the USER window, click the **[Install]** button.


- The file is uncompressed and the software update begins.
- Software update may take tens of minutes.
- To cancel an update, click the **[Cancel]** button.

**4** When the software update is done, the system will automatically restart.

- Since the current connection is disconnected, you have to connect to the system again.



- Since, if the network is disconnected, the power fails or the PC abnormally operates during a software update, the system may not work afterwards, take care not to cause a problem during an update.

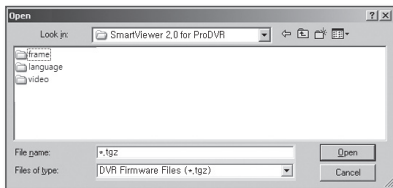


## To reset the system

If the system abnormally operates or a problem occurs, you can restart or reset the system.

Click **<SYSTEM>** → **<RESET>**.

- The Reset window appears.

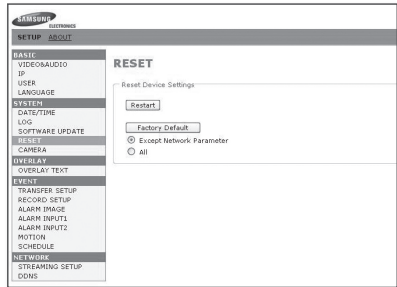

- 
- **<Restart>**: The Reset window appears.
  - **<Factory Default>**: Initializes the system settings to the factory settings and then restarts the system.
    - **<Except Network Parameter>**: Initializes the system settings except network settings.
    - **<All>**: Initializes all the system settings. Selecting this option is the same as pressing the [FACTORY RESET] button on the rear panel of the main body.
- 



- After reset and restart, you have to connect to the system again.
- It takes a few minutes until the system booting is completed.  
You cannot connect to the system until the system booting is complete.
- After running **<Factory Default>** → **<All>**, you have to run **<IP Installer.exe>** program and setup network settings such as IP address, Subnet mask, Gateway, etc., to connect to the Internet.




## To setup the camera

### 1 Click <SYSTEM> → <CAMERA>.

- You can select one from <Image Flip>, <Image>, <White Balance>, <Exposure Mode>, <Adaptive Lighting Mode>, <Power Line>, <Saturation> and <Detail>.

### 2 To complete the setting, click the [Apply] button.

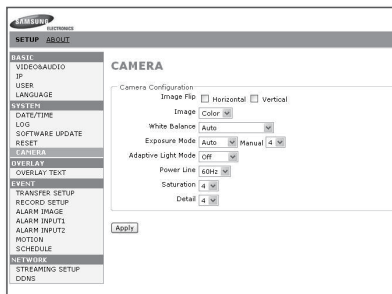

- **<Image Flip>**: Images can be flipped horizontally or vertically.
- **<Image>**: Images can be set to color or black and-white.
- **<White Balance>**: Color casts can be adjusted so that images in white can normally be seen at any color temperature.
  - <Auto>: The camera can automatically adjust the color temperature in real time according to changes in surroundings. The range of color temperature that can be adjusted is approx. 2000K – 8000K.
  - <Daylight>: A mode set to a color temperature of 6500K.
  - <Tungsten>: A mode set to a color temperature of 2800K.
  - <Office fluorescent>: A mode set to a color temperature of 4000K.
  - <Fluorescent>: A mode set to a color temperature of 4500K.
  - <Horizontal>: A mode set to a color temperature of 2000K.
- **<Exposure Mode>**: The level of exposure can be adjusted by selecting Auto or Manual. (Settings: Auto, Manual (0,1,2,3,4))
  - <Auto>: Supports the optimum exposure level.
  - <Manual>: A desired exposure level (0 – 4) can be set according to surroundings.
- **<Adaptive Lighting Mode>**: It can improve the lighting effect by increasing the intensity of the light.
  - <Off>: A mode in which the backlight function is turned off.
  - <Normal>: A mode in which both the dark and bright areas are adjusted according to the surroundings.
  - <Backlit>: A mode in which the backlight adjustment function is enhanced.
- **<Power Line>**: The power frequency can be set to 50 Hz or 60 Hz.
- **<Saturation>**: The screen image can be adjusted to desired saturation. (Settings: 0,1,2,3,4,5,6,7,8,9)
- **<Detail>**: Horizontal and vertical sharpness can be adjusted. (Settings: 0,1,2,3,4,5,6,7,8,9)


## LAYOUT CONFIGURATION

---

You can display text on the screen.

### To Set text

- 1 Click **<OVERLAY>** → **<OVERLAY TEXT>**.
  - The Overlay Text window appears.
- 2 To complete the setting, click the **[Apply]** button.
  - The settings are saved.

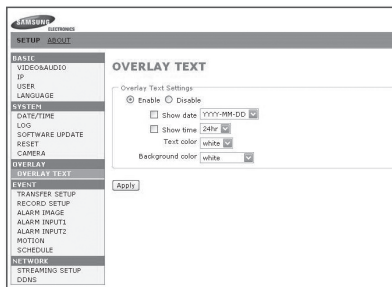

- **<Overlay Text Settings>**: The **<Disable>** option hides an overlay text while **<Enable>** shows it on the screen.
  - **<Show date>**: Determines whether to display date on the bottom screen.
    - **<Display format>**: Select a date display format.  
YYYY-MM-DD: Year-Month-Day / MM-DD-YYYY: Month-Day-Year / DD-MM-YYYY: Day-Month-Year
  - **<Show time>**: Determines whether to display time on the bottom screen.
    - **<Display format>**: Select a date time format.  
24hr: Time notation in 24 hours / 12hr: Time notation in 12 hours with AM/PM.
  - **<Text color>**: Determines text color. You can select either **<White>** or **<Black>**.
  - **<Background color>**: Determines text background color. You can select one from **<White>**, **<Black>** and **<Transparent>**.
-

## EVENT CONFIGURATION

### To set the image transmission function

You can set an FTP/Email(SMTP) server to send the prior/posterior alarm image saved in the camera when an alarm is generated.

Click **<EVENT>** → **<TRANSFER SETUP>**.

- The TRNASFER SETUP window appears.



- If a commercial SMTP service is used, ask the SMTP service provider for detailed settings.

- <FTP Transfer>**: You can transfer an alarm image to an FTP server. When the initial FTP server setting and connection are not verified, the **<Not verified>** message appears.
  - <Use Passive Mode>**: Select this option when the passive mode connection is necessary due to firewall or FTP server setting.
  - <FTP Server Address>**: Enter the IP address of an FTP server to which an alarm image will be sent.
  - <Upload Path>**: You can set the path of the FTP account to transfer an alarm image. You can set a path by just typing **</directory name>** or **<directory name>** in this field. If you do not specify a path, alarm files are sent to the root directory of the FTP account.
  - <Port>**: Although FTP server port is 21 as a default, you can change the port number according to the FTP server settings.
  - <User ID>**: Enter a user account ID to connect to login the FTP server.
  - <Password>**: Enter a user account password to login the FTP server.

### To test FTP transmission

Click the **[Test]** button.

- Connect to the configured FTP server and conduct image transmission test automatically.
- When the FTP server connection and transmission tests are complete, the **<Verified>** message will be displayed.
- If the test fails, an error message appears. In this case, check the FTP server status and the configured settings once again.

- **<E-mail(SMTP) Transfer>** : You can transfer an alarm image through Email. This function supports SMTP Email server only. When the initial SMTP server setting and connection are not verified, the **<Not verified>** message appears.
  - **<SMTP Server Address>**: Enter the IP address of an SMTP server to be used to send an Email. Example) smtp.hotmail.com
  - **<User ID>**: Enter a user account ID to connect to the SMTP server.
  - **<Password>**: Enter a user account password to the SMTP server.
  - **<E-mail Sender>**: Enter the address of the Email sender. If the sender address is incorrect, the Email from the sender may be classified into SPAM mail by the SMTP server and may not be sent.
  - **<E-mail Receiver>**: Enter the address of the Email recipient.
  - **<Title>**: Enter the title of the Email.
  - **<Message>**: Enter the contents of the Email. An alarm image is attached to the Email as an attached file.

Click the **[Test]** button.

E-mail(SMTP) Transfer  
( Not verified )

SMTP Server Address

User ID

Password

E-Mail Receiver

Title

Message

### To setup the record

- The RECORD SETUP window appears.

[illegible]

- **<SD Card>**: Enables you to verify data saved on the SDHC memory card and format the memory card itself. It is possible to set to automatically delete movie clips recorded before a certain period of time (e.g. 1 week, 1 month, or 1 year).
- **<Options>**: Determine whether or not you wish to receive Email notification of insufficient capacity warnings.

## To set an alarm image


You can set an image to be sent through FTP/E-mail(SMTP) or saved on the SDHC memory card when an alarm is generated or during the scheduled transfer.

### 1 Click <EVENT> → <ALARM IMAGE>.

- The ALARM IMAGE SETUP window appears.

### 2 To complete the setting, click the [Apply] button.

- The settings are saved.

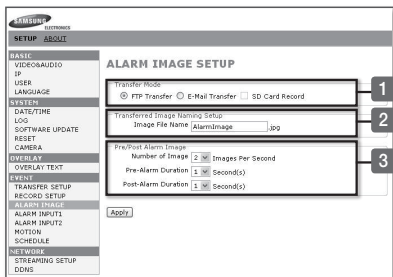

### 1. <Transfer Mode>: You can select a method to send an alarm image from the <FTP>, <E-Mail> and <SD Card Record>.

- <FTP Transfer>: The image is sent to the specified FTP address.
- <E-Mail Transfer>: The image is sent to the specified Email address.
- SD Card Recording
  - ▶ Insert an SDHC memory card.
  - ▶ Configure the SDHC memory card (refer to page 52 for details).
  - ▶ Check the SD Card Recording option and then click on the [Apply] button. The SD indicator will then turn on and recording will commence.
  - ▶ To remove the SDHC memory card, first uncheck the SD Card Recording option and then click on the [Apply] button.



Removing the SDHC memory card while recording is in progress can damage the data.

### 2. <Transferred Image Naming Setup>: You can set the file name of an alarm image to be sent when an alarm is generated or during the scheduled transfer.

### 3. <Pre/Post Alarm Image>: You can determine which of previous or posterior image is to be sent.

- <Number of Image>: Determines number of images to be sent per second. You can select 1 or 2 images per second.
- <Pre-Alarm Duration>: Determines time of prior images to be sent. You can select <1 sec> or <3 sec>. You can send a prior image of up to 3 seconds after an alarm is generated. (The maximum time is determined by the number of images to be sent per second.)
- <Post-Alarm Duration>: Determines time of posterior images to be sent. You can select <1 sec> or <3 sec>. You can send a posterior image of up to 3 seconds after an alarm is generated. (The maximum time is determined by the number of images to be sent per second.)


## To set an alarm input

- 1 Click **<EVENT>** → **<ALARM INPUT 1>** or **<ALARM INPUT 2>**.

- The ALARM INPUT window appears.

- 2 To complete the setting, click the **[Apply]** button.

- The settings are saved.

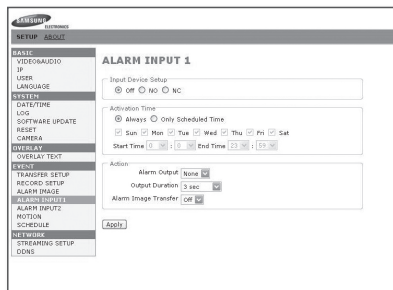

- **<Input Device Setup>**: Select an input type from the **<OFF>**, **<NO>** and **<NC>**.
  - **<NO>**(Normal Open): It is normally open, but if it is close, an alarm will be generated.
  - **<NC>**(Normal Close): It is normally close, but if it is open, an alarm will be generated.
- **<Activation Time>**: You can set time to accept an alarm to take an action.
  - **<Always>**: Always conducts the **<Action>** setting when an alarm is generated.
  - **<Only Scheduled Time>**: Conducts the **<Action>** setting for an alarm only when it occurs during the specified time period on the specified day of the week. The Start Time must prior to and must differ from the End Time.
- **<Action>**: You can set an operation to be conducted when an alarm is generated.
  - **<Alarm Output>**: Determines alarm output port to which the alarm signal is to be sent.
  - **<Output Duration>**: Determines the period of time to output alarm signal to the specified alarm output port when an alarm is generated. If another alarm event is generated during the alarm output, the delay time is recalculated on the basis of the most recently generated an alarm.
  - **<Alarm Image Transfer>**: If **<On>** is selected, a JPG image is transmitted through FTP or Email (SMTP) or saved on the SDHC memory card according to the **<EVENT>** → **<TRANSFER SETUP>** settings.


## To set the motion detection function

### 1 Click <EVENT> → <MOTION>.

- The MOTION window appears.

### 2 To complete the setting, click the [Apply] button.

- The settings are saved.

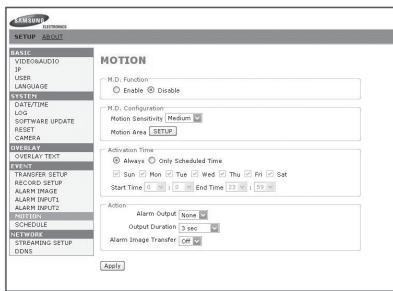


- <M.D. Function>: <Enable> activates the motion detection function, while <Disable> disables the function.
- <M.D. Configuration>: You can set motion detection performance parameters.
  - <Motion Sensitivity>: Select a motion detection function sensitivity from <High>, <Medium> and <Low>. The <High> option provides high sensitivity of motion detection and generates motion detection event if a small motion is detected.
  - <Motion Area>: You can set an area to detect motion.
- <Activation Time>: You can set time to accept a motion detection to take an action.
  - <Always>: Always conducts the <Action> setting when a motion is detected.
  - <Only Scheduled Time>: Conducts the <Action> setting for a motion detection only when it occurs during the specified time period on the specified day of the week. The Start Time must prior to and must differ from the End Time.
- <Action>: You can set an operation to be conducted when a motion is detected.
  - <Alarm Output>: Determines a motion detection output port to which the alarm signal is to be sent.
  - <Output Duration>: Determines the period of time to output the alarm signal to the specified alarm output port when a motion is detected. If another detection event is generated during the alarm output, the delay time is recalculated on the basis of the most recently generated motion detection.
  - <Alarm Image Transfer>: If <On> is selected, a JPG image is transmitted through FTP or Email (SMTP) or saved on the SDHC memory card according to the <EVENT> → <TRANSFER SETUP> settings.

## To set a motion detection target area

You can set a specific area to detect a motion in.

- 1 In the MOTION window, click the **[Motion Area]** button.
  - The Motion Area window appears.
  - You can set a specific area to detect a motion in.
- 2 Click over square boxes corresponding to your desired motion detection target area.
  - The selected area is colored in yellow.
- 3 To cancel a selection, click over the square box once again.
  - The square box returns to its original color.
- 4 To complete the setting, click the **[Apply]** button.
  - The settings are saved.
  - The motions in the selected area will be detected.

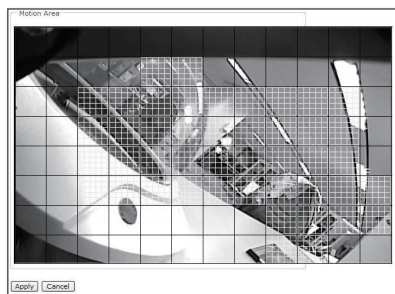



## To set scheduled transmission


You can have a JPEG image sent through FTP and Email or recorded on the SDHC card periodically.

### 1 Click <EVENT> → <SCHEDULE>.

- The SCHEDULE window appears.

### 2 To complete the setting, click the [Apply] button.

- The settings are saved.

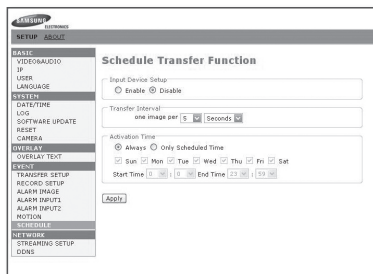

- <Schedule Transfer Function>: <Enable> activates the scheduled transmission function, while <Disable> disables the function.
- <Transfer Interval>: You can set the time interval to transmit images. You can select a unit of time from <SECONDS> or <MINUTES>. You can set the time interval so that an image is transmitted every 5/15/30/45/60 seconds or minutes.
- <Activation Time>: You can set the time to execute the scheduled transmission function.
  - <Always>: Always transmits images according to the specified interval.
  - <Only Scheduled Time>: Transmits images according to the specified interval during the specified time period on the specified day of the week.



- The Start Time must be prior to and must differ from the End Time.

## NETWORK CONFIGURATION

---

### To set video streaming

You can control the data transfer rate according to the camera video streaming type and network bandwidth.

- 1 Click **<NETWORK>** → **<STREAMING SETUP>**.
  - The STREAMING SETUP window appears.
- 2 To complete the setting, click the **[Apply]** button.
  - The settings are saved.



- **<Streaming Type>**: You can select a protocol for video transmission from the **<TCP>**, **<UDP(Unicast)>** and **<UDP(Multicast)>**.
  - **<TCP>**: It is a general purpose protocol used for a transmission that requires reliability. Since it provides a connection based communication between the sender and recipient, it provides high reliability against transmission data loss. However, it is inappropriate to transmit a large amount of data in real-time because of its transmission overhead. It enables reliable data transmission over xDSL and cable network at a relatively slow speed.
  - **<UDP(Unicast)>**: It refers to transmitting data to only one receiver (1:1).
  - **<UDP(Multicast)>**: It refers to the data transfer protocol in one-to-many (1:N) between the transmitting and receiving terminals. Although it alleviates the network load, it requires **<Multicast>** router. For more information such as whether the network over which the camera is installed supports **<Multicast>**, ask your network administrator.
- **UDP**: It is a protocol appropriate to transmit a large amount of data such as multimedia data in short time. However, it provides higher transmission efficiency than TCP especially over high speed connections faster than 100Mbps.
- With multicast activated, it is not possible to perform video recording search.
- Audio cannot be transmitted to the camera through the microphone.
- Multicast backbone (MBone) is not supported, and the camera can only be used in a LAN-based multicast environment.
- **<Streaming Control>**: You need to set the bandwidth to an appropriate value according to the data rate of your network for smooth video streaming.
  - You can set the **<Bandwidth>** by selecting one from **<Unlimited/5Mbps/3Mbps/1Mbps/600Kbps/300kbps/150Kbps>**.
  - If your network provides data rate equal to or higher than 100Mbps, it is recommended to set the **<Bandwidth>** to **<Unlimited>** or **<5Mbps>**. If you are using a broadband Internet connection, set the **<Bandwidth>** to **<3Mbps>** or **<1Mbps>**.
  - If you are using low speed xDSL network, set the **<Bandwidth>** to **<600Kbps>** or lower for smooth video streaming.
  - The maximum number of images per second in the video setting menu is automatically determined depending on the selected **<Bandwidth>** value.

## To set DDNS


DDNS is an abbreviation of Dynamic Domain Name Service that converts the IP address of a camera into a general Host Name so that the user can easily remember it and enables connecting a camera with a fixed Host Name even if the IP address of the camera may be dynamically changed.

### 1 Click <NETWORK> → <DDNS>.

- The DDNS window appears.

### 2 To complete the setting, click the [Apply] button.

- The settings are saved.

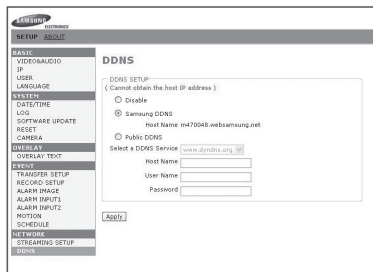

- If Samsung's DDNS service is selected, the Host Name is automatically generated using the camera MAC address.
  - A camera MAC address consists of <One among from lower-case alphabet characters of c, m and p> + <Last 6 digits of the MAC address> + <websamsung.net>.
  - The lower-case alphabet letter becomes <c> if the first 6 digits of the MAC address is <00:00:f0>, <m> if <00:16:6c>, and <p> if <00:68:36>.
- Example) - If the MAC address of a camera is 00 : 00 : f0 : ff : fe : 42,  
 c + fffe42 + websamsung.net = cffe42.websamsung.net  
 - If the MAC address of a camera is 00 : 16 : 6c : ff : fe : 42,  
 m + fffe42 + websamsung.net = mffe42.websamsung.net  
 - If the MAC address of a camera is 00 : 68 : 36 : ff : fe : 42,  
 p + fffe42 + websamsung.net = pffe42.websamsung.net
- To use another DDNS service, sign up a DDNS site that is supported by a camera and use it with the user ID and password you have specified when you sign up the site.
  - For information about how to sign up another DDNS and setup Host Name, please visit the corresponding DDNS service website and ask about that.

## TROUBLESHOOTING

PROBLEM	SOLUTION
<b>I can't access the camera from a web browser.</b>	<ul style="list-style-type: none"> <li>• Check to make sure that the camera's Network settings are appropriate.</li> <li>• Check to make sure that all network cables have been connected properly.</li> <li>• If connected using DHCP, verify that the camera is able to acquire dynamic IP addresses without any problem.</li> <li>• If connected using a DDNS URL, verify that the MAC address has been properly entered.</li> <li>• If the camera is connected to an xDSL network, ensure that Bandwidth is set to less than 600Kbps. Because xDSL offers slow connection speed, setting Bandwidth high results in network load and hinder network connection.</li> <li>• If the camera is connected to a router, verify that port forwarding is properly configured.</li> </ul>
<b>Viewer got disconnected during monitoring.</b>	<ul style="list-style-type: none"> <li>• Connected Viewers become disconnected upon any change to camera or network configurations.</li> <li>• Check all network connections.</li> <li>• If the camera is connected over an xDSL network, it's possible for Viewer to disconnect under poor network conditions.</li> </ul>
<b>I cannot connect to the system using a tab browser of Internet Explorer 7.0.</b>	<ul style="list-style-type: none"> <li>• When you try to connect to the system using a tab browser, the same cookie information is shared, resulting in errors when connected. Therefore, instead of using a tab browser, open a new browser window to connect to the system.</li> </ul>
<b>The camera connected to the network is not detected in the IP installer program.</b>	<ul style="list-style-type: none"> <li>• Turn off the firewall settings on your PC and then search the camera again.</li> </ul>
<b>Images overlap.</b>	<ul style="list-style-type: none"> <li>• Check whether two or more cameras are set to a single multicast address instead of different addresses. If a single address is used for multiple cameras, the images may overlap.</li> <li>• If the inappropriate video codec is installed on your computer, the video will not be played properly. Uninstall the video codec installed and check it again.</li> </ul>

PROBLEM	SOLUTION
No image appears.	<ul style="list-style-type: none"> <li>If the transmission method is set to multicast, check whether there is a router that supports multicast in the LAN the camera is connected to.</li> </ul>
I enabled Motion Detection Feature under Motion Detection, but .jpg files are not getting sent over FTP/SMTP even after motion detection occurs at the FT camera.	<ul style="list-style-type: none"> <li>Verify the settings in the following sequence:               <ol style="list-style-type: none"> <li>NTP must be properly configured.</li> <li>Motion Detection Feature must be enabled.</li> <li>Alarm Video Transmission must be enabled.</li> <li>Check for scheduling conflict.</li> </ol> </li> </ul>
Is it possible to configure Motion Zone with Motion Detection Feature disabled?	<ul style="list-style-type: none"> <li>Yes. Motion Zone can be configured independently of whether or not Motion Detection Feature is in use.</li> </ul>
A motion event took place but didn't trigger an alarm.	<ul style="list-style-type: none"> <li>Check alarm output port settings.</li> </ul>
Data is not getting recorded on the SDHC memory card.	<ul style="list-style-type: none"> <li>Make sure that the memory card is not defective.</li> <li>Verify that the Lock switch on the memory card is not enabled.</li> </ul>
SD Indicator will not turn on after inserting an SDHC memory card.	<ul style="list-style-type: none"> <li>Make sure that the memory card is not defective.</li> <li>Go to Configurations → Events → Alarm Image Settings and verify that SD Card Recording option is checked.</li> </ul>
I inserted an SDHC memory card, but the camera isn't working properly.	<ul style="list-style-type: none"> <li>Make sure that the memory card has been inserted correctly in the right direction. With memory cards that have been formatted from a different device, their performance cannot be guaranteed when used in the camera. Go to Configurations → Events → Recording Settings and format the memory card again.</li> </ul>
The SDHC memory card is not getting formatted.	<ul style="list-style-type: none"> <li>Verify that the memory card's Lock function is not enabled.</li> </ul>

## SPECIFICATIONS

Item			Details
Image Device			Progressive SCAN CMOS 1/2"
Effective Pixels			2048(H) x 1536(V)
Min. Scene Illumination			2 Lux
Dynamic Range			60dB
Lens			Manual Iris
Lens Mount			CS/C (Mount adaptor)
Environment	Network Board	OS	Embedded Linux
	Client	OS	Windows XP , VISTA
Browser	Web Browser		Internet explorer 6.0 higher
Video Player			Quicktime, VLC player(RTP/RTSP)
Compression	Video		MPEG4 ,MJPEG
	Audio		G.711 : Full Duplex, 64Kbps, 8KHz sampling
Network Hardware	Flash Memory		16M byte
	SDRAM		128M byte
Network	Ethernet		10/100BASE-T
	Network Protocol	Network Protocol	TCP, UDP, NTP, HTTP, DHCP
		Streaming	TCP, UDP(Unicast, Multicast), RTP, RTSP
		DDNS	Samsung DDNS and Public DDNS servers support
Video Resolution	MJPEG Codec		QXGA(2048 x 1536), UXGA(1600 x 1200), SXGA(1280 x 1024)
	MPEG4 Codec		VGA(640 x 480)

Item			Details
<b>Video Quality</b>			Very High, High, Normal, Low, Very Low
<b>Motion Detection</b>			High, Medium, Low
<b>Connection Users</b>	Unicast		Maximum 10 Users
	Multicast		Maximum 20 Users
<b>Alarm IN/OUT</b>			Input: 2, Output: 2
<b>Alarm Event Image Transfer</b>	Alarm Input Transfer		FTP Transfer / Email(SMTP) Transfer / SD Card Record
	Motion Detection Transfer		FTP Transfer / Email(SMTP) Transfer / SD Card Record
<b>Time Setup</b>			Synchronization with NTP, Synchronization with PC, Manual setting
<b>IP installer</b>			IP installation function( XP, VISTA support )
<b>Software Upgrade</b>			Firmware upgrade by web browser
<b>SDK</b>	HTTP API	Application program interface	Provides functionality to set/retrieve internal parameter values. Get JPEG image or multi-part JPEG stream. Monitor alarm in and control alarm out.
	Windows API	Windows API	ActiveX components for viewing streams from video camera and controlling.
<b>Power</b>			NTSC: AC24V±10%(60Hz±0.3Hz), PAL: AC24V±10%(50Hz±0.3Hz) DC12V±10%/-5% PoE (Power over Ethernet)
<b>Power Consumption</b>			Approx. 6W
<b>Operation Temperature</b>			0°C~50°C
<b>Operation Humidity</b>			~90%
<b>Dimension</b>			W147.4 X D60.9 X H83 mm
<b>Weight</b>			Approx. 382g

## Frame Rate (QXGA)

Image Resolution	JPEG Quality (Level)	JPEG Image size (KB)	JPEG Frame rate (fps)	MPEG Frame rate (fps)			
				12	6	3	1
QXGA (2048 x 1536)	10 (High)	240	12			9 (2)	10 (1)
			6	4 (8)	5 (5)	5 (3)	6 (1)
			3	2 (10)	3 (6)	3 (3)	3 (1)
			1	1 (10)	1 (6)	1 (6)	1 (1)
	9	194	12			10 (2)	10 (1)
			6	5 (10)	6 (6)	6 (3)	6 (1)
			3	3 (11)	3 (6)	3 (3)	3 (1)
			1	1 (11)	1 (6)	1 (3)	1 (1)
	8	176	12			10 (3)	10 (1)
			6	5 (10)	6 (6)	6 (3)	6 (1)
			3	3 (11)	3 (6)	3 (3)	3 (1)
			1	1 (12)	1 (6)	1 (3)	1 (1)
	7	160	12			10 (3)	11 (1)
			6	6 (11)	6 (6)	6 (3)	6 (1)
			3	3 (11)	3 (6)	3 (3)	3 (1)
			1	1 (12)	1 (6)	1 (3)	1 (1)
	6	150	12			10 (3)	12 (1)
			6	6 (11)	6 (6)	6 (3)	6 (1)
			3	3 (11)	3 (6)	3 (3)	3 (1)
			1	1 (12)	1 (6)	1 (3)	1 (1)
	5 (Normal)	136	12			11 (3)	12 (1)
			6	6 (11)	6 (6)	6 (3)	6 (1)
			3	3 (11)	3 (6)	3 (3)	3 (1)
			1	1 (12)	1 (6)	1 (3)	1 (1)
	4	118	12			11 (3)	12 (1)
			6	6 (12)	6 (6)	6 (3)	6 (1)
			3	3 (12)	3 (6)	3 (3)	3 (1)
			1	1 (12)	1 (6)	1 (3)	1 (1)
	3	105	12			12 (3)	12 (1)
			6	6 (12)	6 (6)	6 (3)	6 (1)
			3	3 (12)	3 (6)	3 (3)	3 (1)
			1	1 (12)	1 (6)	1 (3)	1 (1)



Image Resolution	JPEG Quality (Level)	JPEG Image size (KB)	JPEG Frame rate (fps)	MPEG Frame rate (fps)			
				12	6	3	1
<b>QXGA</b> (2048 x 1536)	2	95	12			12 (3)	12 (1)
			6	6 (12)	6 (6)	6 (3)	6 (1)
			3	3 (12)	3 (6)	3 (3)	3 (1)
			1	1 (12)	1 (6)	1 (3)	1 (1)
	1 (Low)	84	12			12 (3)	12 (1)
			6	6 (12)	6 (6)	6 (3)	6 (1)
			3	3 (12)	3 (6)	3 (3)	3 (1)
			1	1 (12)	1 (6)	1 (3)	1 (1)

### Frame Rate (UXGA)

Image Resolution	JPEG Quality (Level)	JPEG Image size (KB)	JPEG Frame rate (fps)	MPEG Frame rate (fps)			
				19	10	3	1
<b>UXGA</b> (1600 x 1200)	10 (High)	174	19			15 (2)	17 (1)
			10	6 (12)	8 (8)	8 (3)	9 (1)
			5	4 (14)	4 (9)	4 (3)	4 (1)
			1	1 (16)	1 (9)	1 (3)	1 (1)
	9	142	19			15 (2)	16 (1)
			10	8 (16)	9 (9)	9 (3)	9 (1)
			5	4 (15)	4 (9)	5 (3)	5 (1)
			1	1 (16)	1 (9)	1 (3)	1 (1)
	8	126	19			16 (3)	18 (1)
			10	8 (16)	9 (9)	9 (3)	9 (1)
			5	4 (16)	5 (9)	5 (3)	5 (1)
			1	1 (17)	1 (9)	1 (3)	1 (1)
	7	112	19			16 (3)	18 (1)
			10	8 (16)	9 (9)	9 (3)	9 (1)
			5	4 (17)	5 (9)	5 (3)	5 (1)
			1	1 (18)	1 (10)	1 (3)	1 (1)

Image Resolution	JPEG Quality (Level)	JPEG Image size (KB)	JPEG Frame rate (fps)	MPEG Frame rate (fps)			
				19	10	3	1
UXGA (1600 x 1200)	6	108	19			17 (3)	18 (1)
			10	8 (16)	9 (9)	9 (3)	10 (1)
			5	5 (18)	5 (10)	5 (3)	5 (1)
			1	1 (19)	1 (10)	1 (3)	1 (1)
	5 (Normal)	97	19			18 (3)	19 (1)
			10	8 (16)	9 (9)	9 (3)	10 (1)
			5	5 (18)	5 (10)	5 (3)	5 (1)
			1	1 (19)	1 (10)	1 (3)	1 (1)
	4	80	19			18 (3)	19 (1)
			10	8 (17)	9 (9)	10 (3)	10 (1)
			5	5 (18)	5 (10)	5 (3)	5 (1)
			1	1 (19)	1 (10)	1 (3)	1 (1)
	3	73	19			19 (3)	19 (1)
			10	8 (17)	9 (9)	10 (3)	10 (1)
			5	5 (18)	5 (10)	5 (3)	5 (1)
			1	1 (19)	1 (10)	1 (3)	1 (1)
	2	63	19			18 (3)	19 (1)
			10	8 (17)	9 (9)	10 (3)	10 (1)
			5	5 (19)	5 (10)	5 (3)	5 (1)
			1	1 (19)	1 (10)	1 (3)	1 (1)
	1 (Low)	84	19			19 (3)	19 (1)
			10	8 (18)	9 (9)	10 (3)	10 (1)
			5	5 (19)	5 (10)	5 (3)	5 (1)
			1	1 (19)	1 (10)	1 (3)	1 (1)

## Frame Rate (SXGA)

Image Resolution	JPEG Quality (Level)	JPEG Image size (KB)	JPEG Frame rate (fps)	MPEG Frame rate (fps)			
				25	13	3	1
SXGA (1280 x 1024)	10 (High)	132	25			21 (2)	22 (1)
			13	8 (16)	9 (9)	12 (3)	13 (1)
			6	5 (19)	5 (10)	6 (3)	6 (1)
			1	1 (23)	1 (13)	1 (3)	1 (1)
	9	108	25			23 (3)	23 (1)
			13	8 (17)	9 (9)	13 (3)	13 (1)
			6	5 (20)	6 (12)	6 (3)	6 (1)
			1	1 (23)	1 (12)	1 (3)	1 (1)
	8	98	25			23 (3)	23 (1)
			13	9 (17)	12 (12)	13 (3)	13 (1)
			6	5 (20)	6 (12)	6 (3)	6 (1)
			1	1 (23)	1 (13)	1 (3)	1 (1)
	7	90	25			23 (3)	24 (1)
			13	9 (18)	12 (12)	13 (3)	13 (1)
			6	5 (20)	6 (12)	6 (3)	6 (1)
			1	1 (24)	1 (13)	1 (3)	1 (1)
	6	84	25			24 (3)	25 (1)
			13	9 (18)	13 (13)	13 (3)	13 (1)
			6	5 (21)	6 (12)	6 (3)	6 (1)
			1	1 (24)	1 (13)	1 (3)	1 (1)
	5 (Normal)	72	25			24 (3)	25 (1)
			13	9 (18)	13 (13)	13 (3)	13 (1)
			6	5 (21)	6 (13)	6 (3)	6 (1)
			1	1 (24)	1 (13)	1 (3)	1 (1)
	4	60	25			24 (3)	25 (1)
			13	9 (18)	13 (13)	13 (3)	13 (1)
			6	5 (21)	6 (13)	6 (3)	6 (1)
			1	1 (24)	1 (13)	1 (3)	1 (1)

Image Resolution	JPEG Quality (Level)	JPEG Image size (KB)	JPEG Frame rate (fps)	MPEG Frame rate (fps)			
				25	13	3	1
<b>SXGA</b> <b>(1280 x 1024)</b>	3	56	25			24 (3)	25 (1)
			13	9 (18)	13 (13)	13 (3)	13 (1)
			6	5 (21)	6 (13)	6 (3)	6 (1)
			1	1 (24)	1 (13)	1 (3)	1 (1)
	2	48	25			24 (3)	25 (1)
			13	9 (19)	13 (13)	13 (3)	13 (1)
			6	5 (22)	6 (13)	6 (3)	6 (1)
			1	1 (25)	1 (13)	1 (3)	1 (1)
	1 (Low)	42	25			24 (3)	25 (1)
			13	10 (19)	13 (13)	13 (3)	13 (1)
			6	6 (23)	6 (13)	6 (3)	6 (1)
			1	1 (25)	1 (13)	1 (3)	1 (1)

## GPL/LGPL SOFTWARE LICENSE

This product uses open-source software distributed under the terms of GPL and LGPL. And you can visit at [www.samsungsecurity.com](http://www.samsungsecurity.com) to get the source codes of the following GPL and LGPL software used for this product.

- GPL S/W
  - Base Kernel, Busybox, Sysvinit, dosfstools
- LGPL S/W
  - glibc, Inetutils

## GNU GENERAL PUBLIC LICENSE

Version 2, June 1991  
 Copyright (C)1989, 1991 Free Software Foundation, Inc.  
 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software-- to make sure the software is free for all its users.

This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too. When we speak of free software, we are referring to freedom, not price.

Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs ; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have.

You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps :

(1)copyright the software, and (2)offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software.

If the software is modified by someone else and passed on, we want its recipients to know that

what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations. Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

## **TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION**

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law : that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License ; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty ; and give any other recipients of the Program a

copy of this License along with the Program. You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions :

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you ; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program. In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following :

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange ; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange ; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the

major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License.

However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it.

However, nothing else grants you permission to modify or distribute the Program or its derivative works.

These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein.

You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues),

conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all.

For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances. It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General

Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

#### NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN



WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty ; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

one line to give the program's name and an idea of what it does.

Copyright (C)yyyyy name of author

This program is free software ; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation ; either version 2 of the License, or (at your option)any later version.

This program is distributed in the hope that it

will be useful, but WITHOUT ANY WARRANTY ; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program ; if not, write to the Free Software Foundation, Inc.,51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.

Also add information on how to contact you by electronic and paper mail. If the program is interactive, make it output a short notice like this when it starts in an interactive mode :

Gnomovision version 69,

Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY ; for details type 'show w'. This is free software, and you are welcome to redistribute it under certain conditions ; type 'show c' for details.

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than 'show w' and 'show c' ; they could even be mouse-clicks or menu items-- whatever suits your program.

You should also get your employer (if you work as a programmer)or your school, if any, to sign a "copyright disclaimer" for the program,if necessary.

Here is a sample ; alter the names:

Yoyodyne, Inc.,hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker.

signature of Ty Coon, 1 April 1989 Ty Coon, President of Vice This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the **GNU Lesser General Public License** instead of this License.

## GNU LESSER GENERAL PUBLIC LICENSE

Version 2.1, February 1999

Copyright (C)1991, 1999 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston,  
MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price.

Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish) ; that you receive source code or can get it if you want it ; that you can change the software and use pieces of it in new free programs ; and that you are informed that you can do these things. To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain

responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method :

(1)we copyright the library, and (2)we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program.

We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria

of freedom.

The Lesser General Public License permits more lax criteria for linking other code with the library. We call this license the "Lesser" General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs.

These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

## TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables. The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work under copyright law : that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License ; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty ; keep intact all the notices that refer to this License and to the absence of any warranty ; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions :

- a) The modified work must itself be a software library.
- b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
- c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.
- d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional : if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to

the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you ; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library. In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy. This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work

with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License.

Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library.

The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.) Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section.

Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License.

You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things :

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above) ; and, if the work is an executable linked with the Library, with the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.
- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing

the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable. It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things :
  - a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.
  - b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.
8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License.  
Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License.  
However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
9. You are not required to accept this License, since you have not signed it.  
However, nothing else grants you permission to

modify or distribute the Library or its derivative works.

These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.
  11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all.  
For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.
- If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.
- It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims ; this section has the sole purpose of protecting the integrity of the free software distribution system

which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of

promoting the sharing and reuse of software generally.

## **NO WARRANTY**

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## **END OF TERMS AND CONDITIONS**

### **How to Apply These Terms to Your New Libraries**

If you develop a new library, and you want it to be of the greatest possible use to the public, we



recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty ; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

One line to give the library's name and an idea of what it does.

Copyright (C)year name of author

This library is free software ; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation ; either version 2.1 of the License, or (at your option)any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY ; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library ; if not, write to the Free Software Foundation, Inc.,51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer)or your school, if any, to sign a "copyright disclaimer" for the library,if necessary. Here is a sample ; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library 'Frob'(a library for tweaking knobs)written

by James Random Hacker.

signature of Ty Coon, 1 April 1990

Ty Coon, President of Vice

## OpenSSL LICENSE

Copyright (c)1998-2006 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met :

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
  2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
  3. All advertising materials mentioning features or use of this software must display the following acknowledgment :  
"This product includes software developed by the OpenSSL Project for use in the OpenSSLToolkit. (<http://www.openssl.org/>)"
  4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact [openssl-core@openssl.org](mailto:openssl-core@openssl.org).
  5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
  6. Redistributions of any form whatsoever must retain the following acknowledgment:  
"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"
- THIS SOFTWARE IS PROVIDED BY THE  
OPENSSL PROJECT "AS IS" AND ANY  
EXPRESSED OR IMPLIED WARRANTIES,  
INCLUDING, BUT NOT LIMITED TO, THE  
IMPLIED WARRANTIES OF  
MERCHANTABILITY AND FITNESS FOR  
A PARTICULAR PURPOSE ARE  
DISCLAIMED. IN NO EVENT SHALL THE  
OPENSSL PROJECT OR ITS  
CONTRIBUTORS BE LIABLE FOR  
ANY DIRECT, INDIRECT, INCIDENTAL,



SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com).  
This product includes software written by Tim Hudson (tjh@cryptsoft.com).

### Original SSLeay License

Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved. This package is an SSL implementation written by Eric Young (eay@cryptsoft.com). The implementation was written so as to conform with Netscape's SSL. This library is free for commercial and noncommercial use as long as the following conditions are adhered to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code.

The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed.

If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used.

This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the

following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgement:

"This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)"  
The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-).

4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement:

"This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]



## **Correct Disposal of This Product**

(Waste Electrical & Electronic Equipment)

---

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

